

Cole's Covers

Installation directions provided by:



Installation Requirements:





- 17 feet of 1/8" rope - enclosed
- Metal Fasteners - enclosed
- Drill gun with 5/32" drill bit
- Medium Phillips head screwdriver




- There will be 2 packages for your Coles Cover: the cover itself and a small bag that will contain rope, instructions and metal fasteners

- Start with a **CLEAN, PUMPED-OUT** toilet!
- Ensure toilet is standing in an upright position




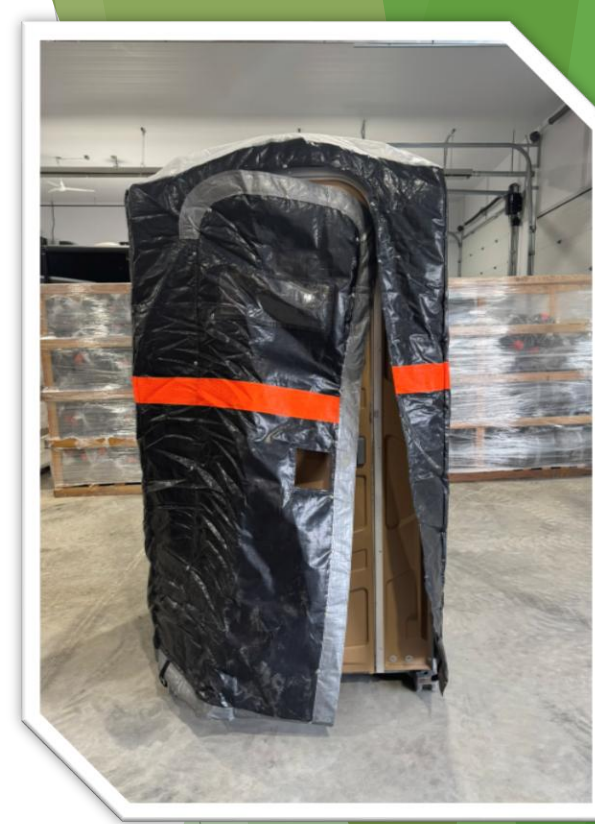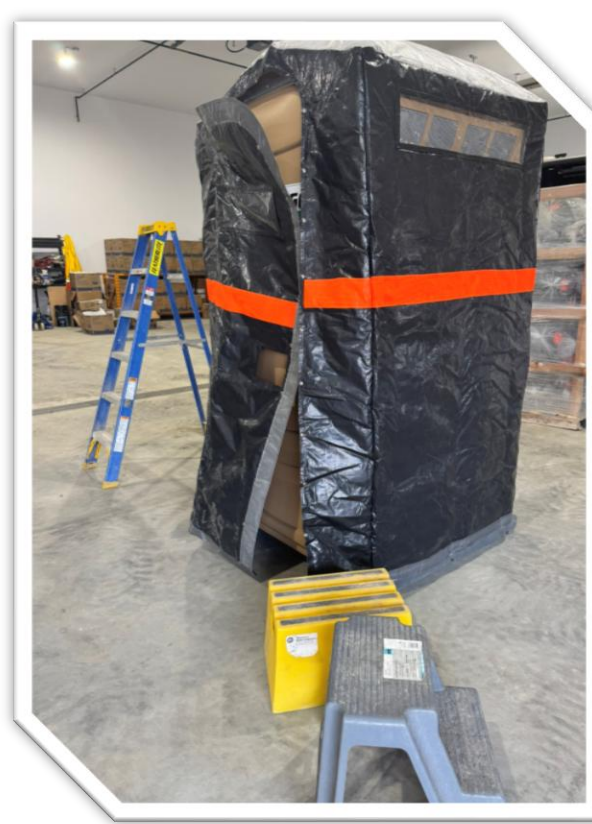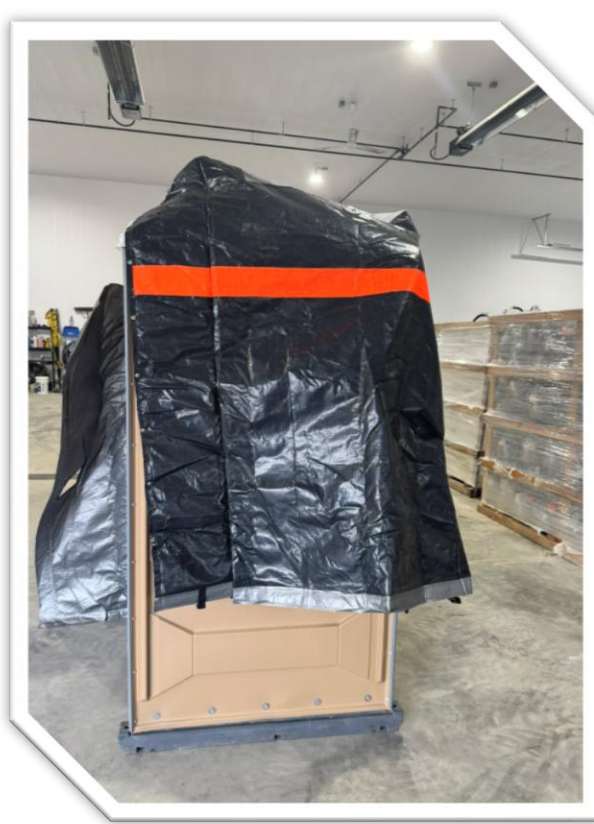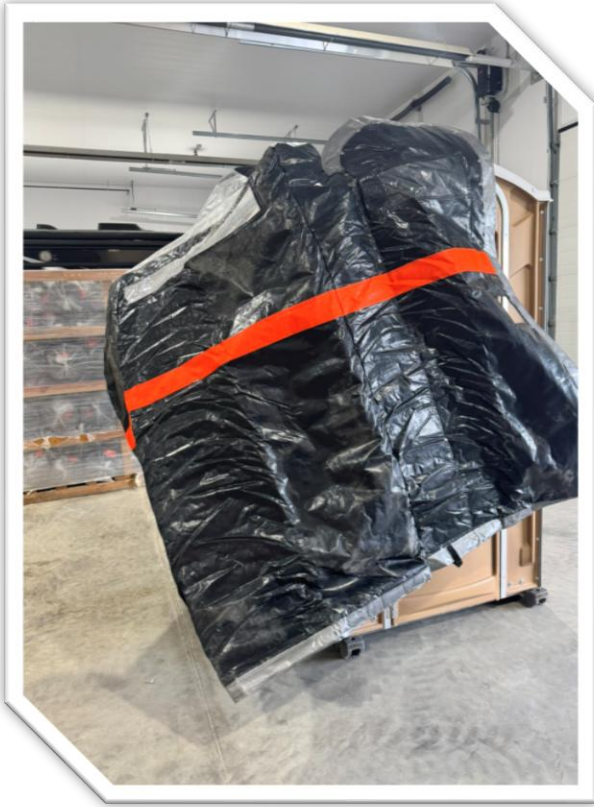

- Put entire cover on toilet, ensuring that the toilet door and the cover door are on the same side. Use a small step ladder, if necessary to help assist with encasing the toilet.
- Pull on all four corners evenly to ensure equal distribution of cover

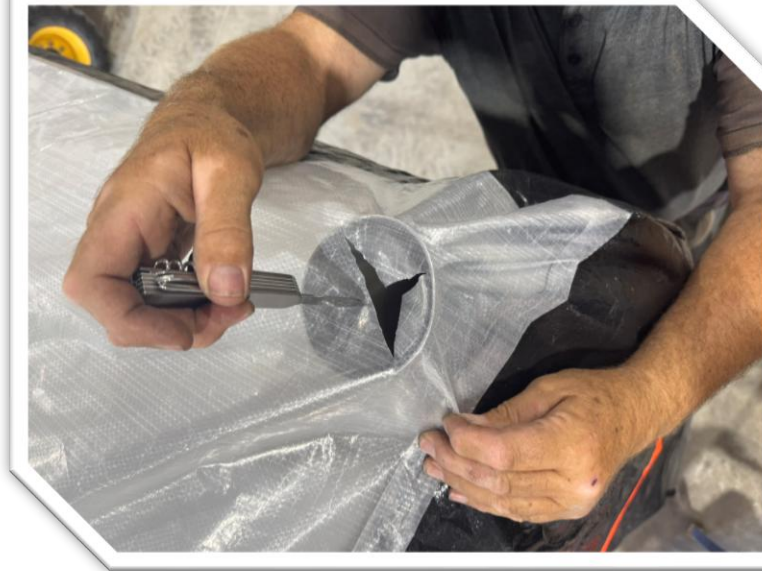





- While the toilet is still upright, using a knife, cut an even circle around the chimney/exhaust pipe, or cut a large **X** and gently pull down over the pipe.

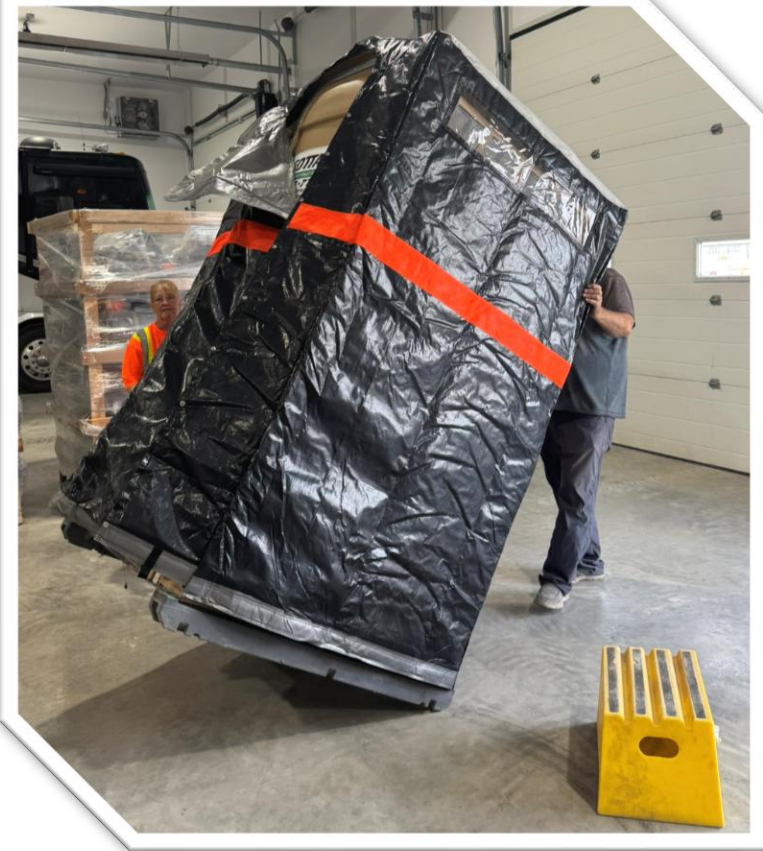



- Lay the toilet on its back with the door facing upwards. Please note that this is *important* that the toilet is cleaned and pumped-out before applying the cover!




- Looking at the bottom of the toilet, loop the provided rope through the *bottom left* of the toilet. Tie off the end and secure the rope to the loop.
- Starting at the *bottom left* where you tied the initial knot, loop the end of the rope to the *top left-hand* side, back down to the *center bottom* loop, *up to the right* corner loop, back down to the *bottom right* corner loop, making an “M” letter
- Secure the cover by ensuring that the rope is taut/snug on all the loops. Tie off the rope at the bottom right loop.

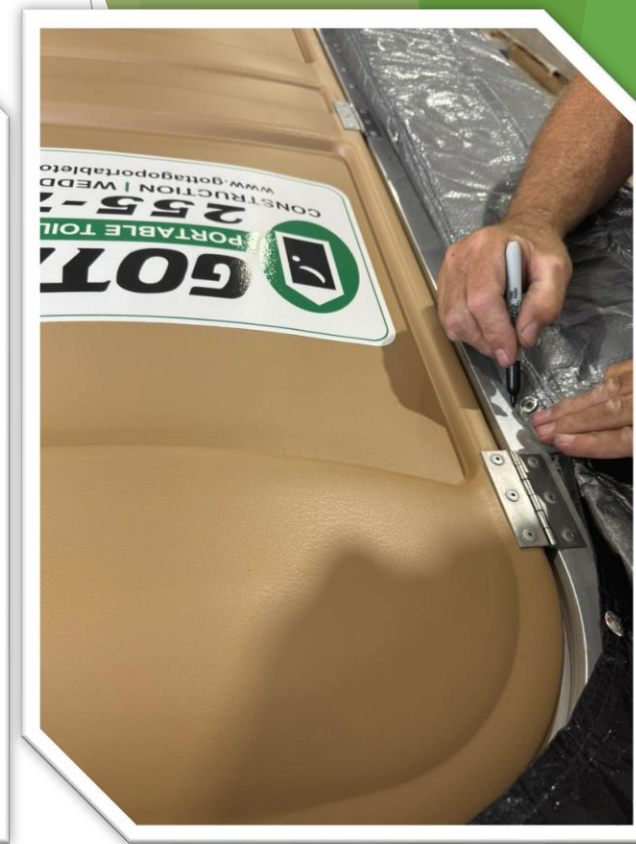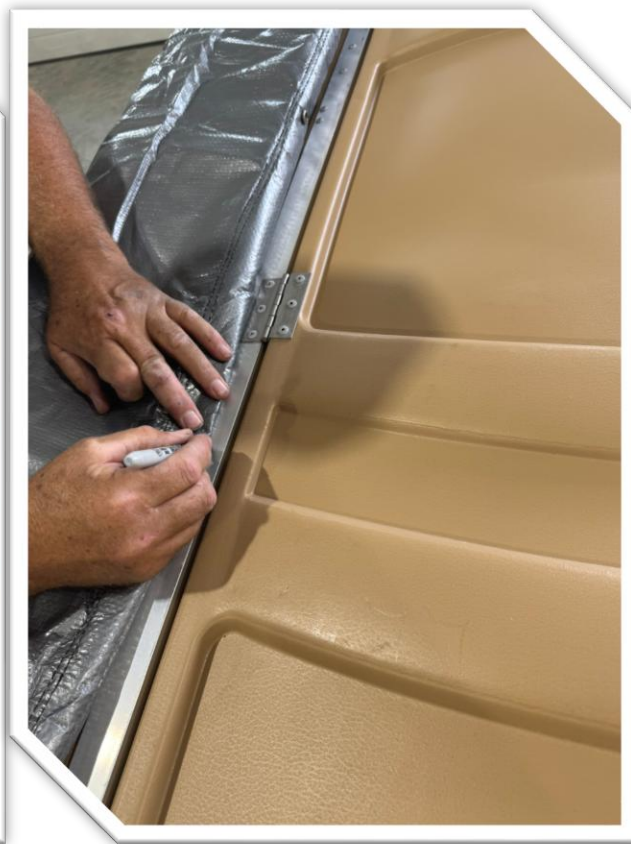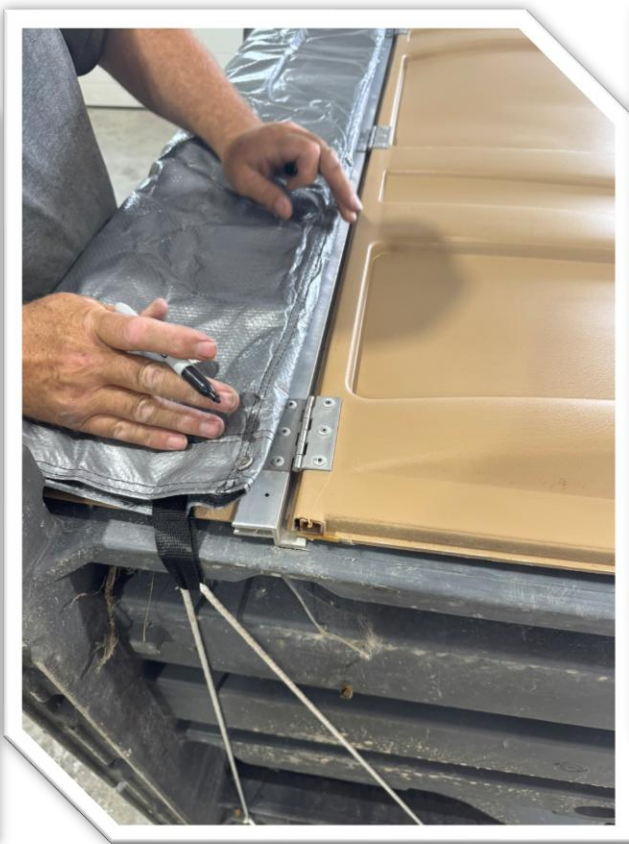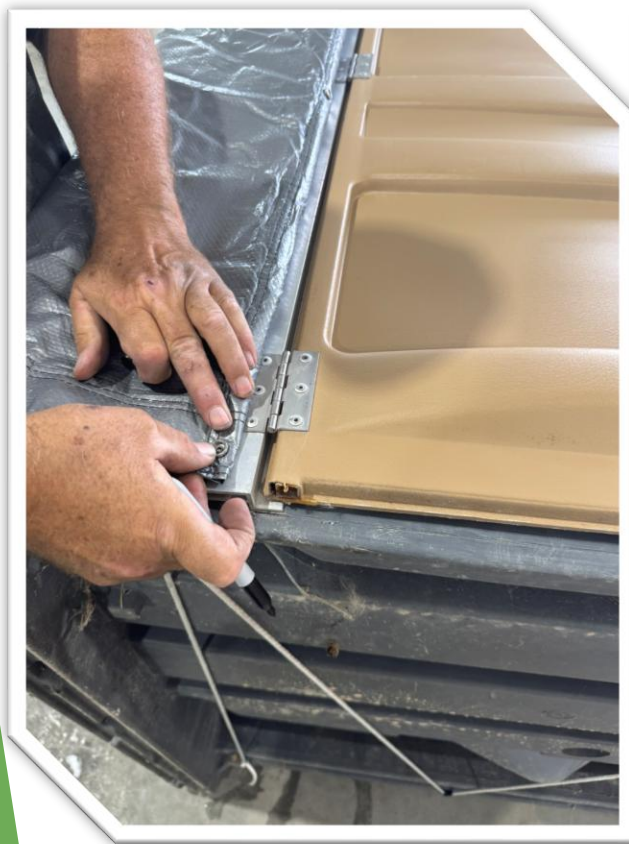


- With the toilet still laying down, flip the door of the cover open, line up the location of the snap against the frame of the toilet door.
- Using a permanent marker, mark the location of the snaps along the toilet door frame

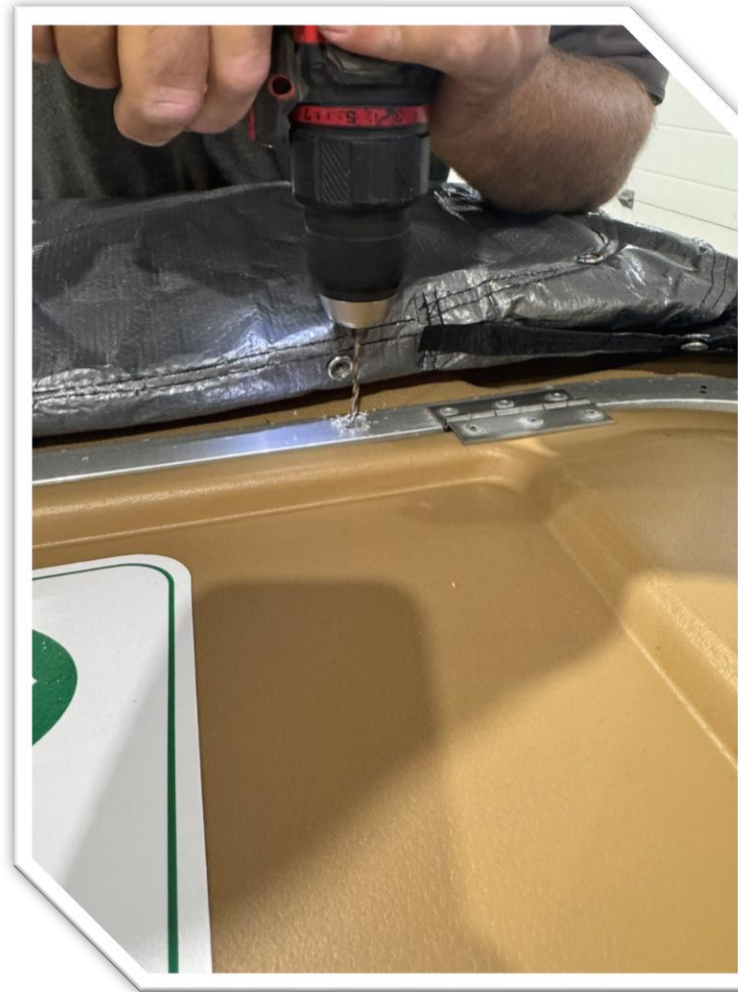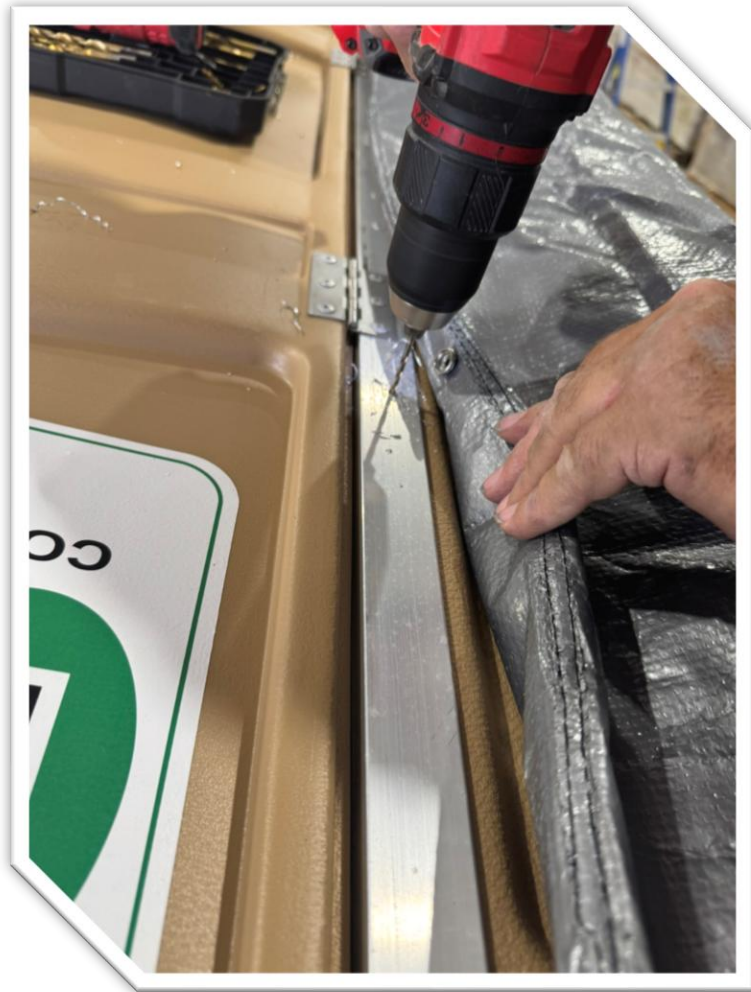

- Using a drill gun and a 5/32” drill bit, drill a hole in the toilet frame along the locations that you have marked, starting first at the door hinge and working your way towards the non-hinged side of the door
- When drilling on the steel on the frame, drill approximately 1cm down, only going through the first layer of steel. Drill *slowly*, else you risk breaking your bit!

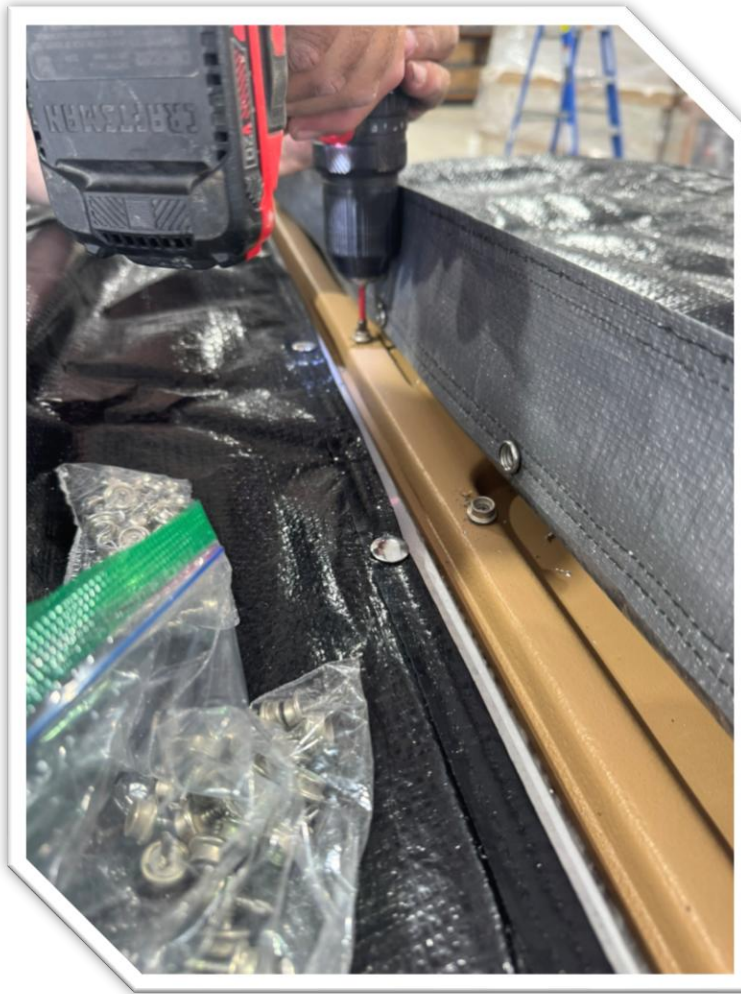

- Put the metal fastener in each hole. Using a Phillips head screwdriver or drill bit, screw the fastener into each hole slowly.
- Line the snaps directly overtop of the fastener and press firmly

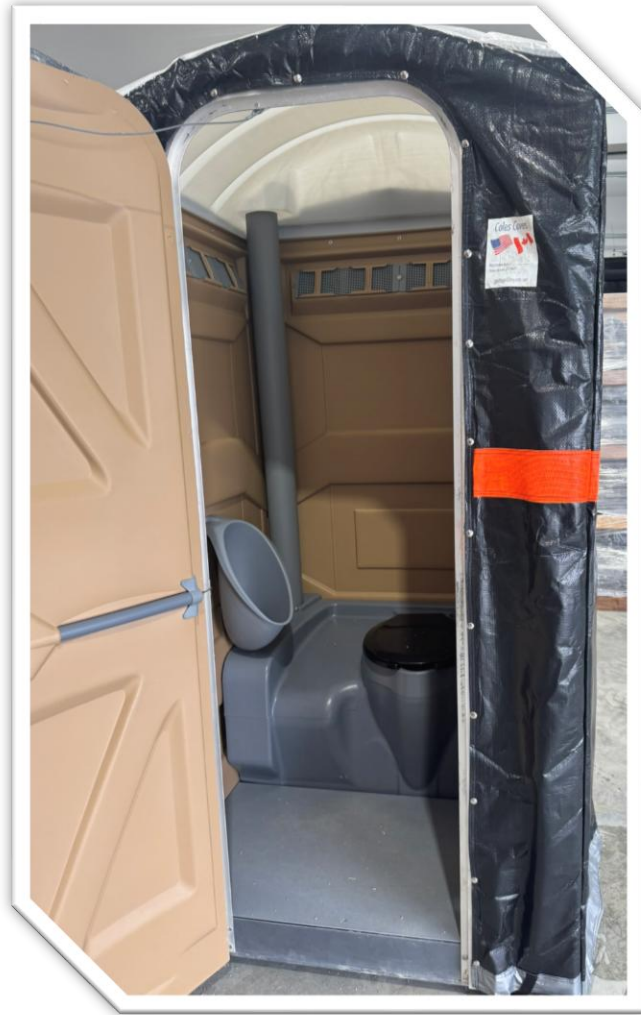

- Stand the toilet upright when all the snaps have been applied!

Dismantling



Using a flat head screwdriver, wedge between the snap and the fastener and pry apart.

DO NOT remove the cover forcefully by hand, else you risk ripping the fastener from the portable!

Cover storage



- Once the cover has been properly removed, simply lay the cover on the ground, fold in half and then fold in half again. Roll it up and use the cord provided to secure the cover for proper storage during the warmer months.

Thank you!